



MBT 250/220 CALIBRATION KIT
PACE P/N 6993-0133
OPERATION & MAINTENANCE
INSTRUCTIONS
MANUAL NUMBER 5050-0288
REV. A

For any questions regarding the following instructions, contact your local authorized PACE dealer or contact PACE directly at:

Telephone (301) 490-9860, Fax (301) 604-9215

PACE Incorporated
9893 Brewers Court
Laurel MD 20723-1990

PACE Incorporated retains the right to make changes to specifications contained herein at any time, without notice.

Contact your local authorized PACE Distributor or PACE Incorporated to obtain the latest specifications.

The following are registered trademarks and/or servicemarks of PACE Incorporated, Laurel Maryland U.S.A. and may only be used to identify genuine PACE products or services:

Cir-Kit, ComForm I, ConducTweez, CRAFT, Dual Path, Flo-D-Sodr, FuseSet, HotSpot, LapFlo, MBT, MicroChine, Micro Portable, MiniChine, Pacenter, PACE, Ped-A-Vac, PETS, PRC, PRINT, ResisTweez, SensaTemp, SMR, Sodr-X-Tractor, StripTweez, SwaPlater, ThermoBand, ThermoPart, ThermoPik, ThermoJet, ThermoTweez, Thermo-Drive, VisiFilter.

The following are trademarks and/or servicemarks of PACE Incorporated, Laurel Maryland U.S.A. and may only be used to identify genuine PACE products or services:

AdapTip, Arm-Evac, DEXITEST, EKO, HandiPik, PIK-VAC, Pro-Evac, Redi-Rak, SNAP-VAC, SR-3, SR-4, ST, Tip-Evac.

PACE Incorporated has provided training on all of its products since 1958 as well as



advanced technology training in all aspects of hand soldering, rework and repair.

Additional copies of this manual or other PACE literature may be obtained

from:

PACE Incorporated
Sales Administration
9893 Brewers Court
Laurel MD 20723-1990

(301)490-9860
(301)4983252 Fax

INTRODUCTION

The following procedure will allow you to effectively calibrate your MBT 250/220 system to insure accuracy and maintain peak performance.


Perform the following procedure step by step, in sequence, to:

1. Alter Tip Temperature values.
2. Alter Tip Temperature Offset values.
3. Determine and/or alter feature status and defaults stored in the system.
4. Recalibrate the system for accuracy.

PROCEDURE

KEYLOCK OPTION

1. An optional KeyLock feature is available from PACE which prevents unauthorized alteration of stored data or calibration of the system. Check the rear panel of the system power source. If the KeyLock feature is present there will be a KeyLock switch located in the upper left portion of the panel. Use the key to turn the switch to the "Unlock" position. If the feature is not present, there will be a round plastic filler plug present at that location.

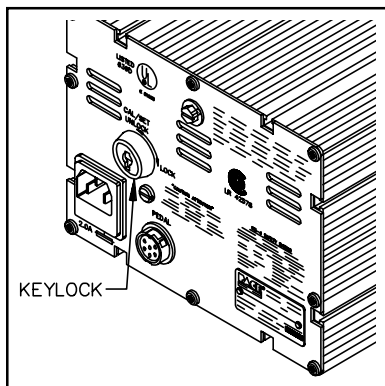


NOTE


The KeyLock switch must be turned to the "UNLOCK" position to alter any of the data stored in memory or to recalibrate the system.

ENTERING CALIBRATION MODE


2. Place **POWER** Switch in the “OFF” (0) position.

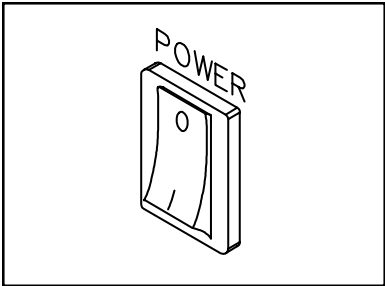


3. Press and hold the Tip Temperature Set and Scroll Down Keys.

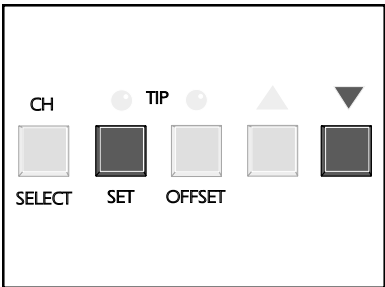

4. Place **POWER** Switch in the “ON” (1) position. All of the system LEDs will light. The Temperature Display will read “888” and change to read “1-X”.

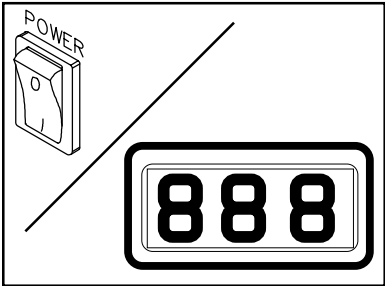


5. Release the Tip Temperature Set and Scroll Down Keys. The Temperature Display will now read “CAL” and only the three Channel LEDs will remain lit signifying that the system is now in the Calibration Mode.

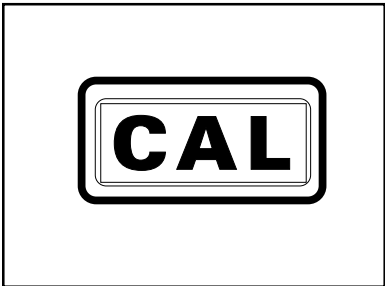

°F/°C READOUT DEFAULT

6. Press and release the Tip Temperature Set


Key. The Digital Readout will display “S-X” (X = 1-9). Either the °F or °C will be on. This is the default readout (e.g., if the °C LED is on the Digital Readout will display temperature readings in °C).

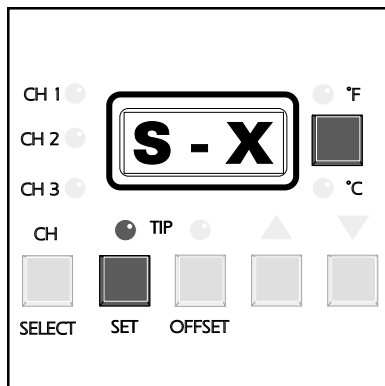


7. Press and release the °F/°C Key to change the default. Each subsequent press and release of the key will change the default.

AUTOMATIC SETBACK

8. As received from the factory, the temperature will read “S - -” meaning that Automatic Setback is turned off. A readout of 1 thru 9 on the right side of the Digital Readout indicates time to Automatic Setback in increments of 10 minutes. For example, “S-3” would indicate a timeout of 30 minutes. To change the Automatic Setback feature, press the Scroll Up Key to increase the timeout and/or enable the feature. Press the Scroll Down Key to decrease the timeout.

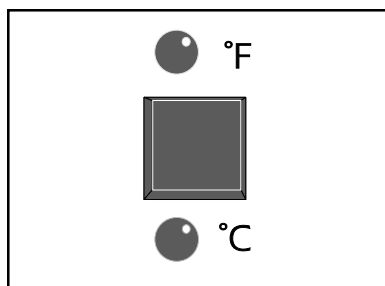


9. Press the Tip Temperature Set Key to store the °F/°C default and Automatic Setback value in system memory. The Digital Readout will revert to display “CAL” and only the Channel 1 LED will remain lit.

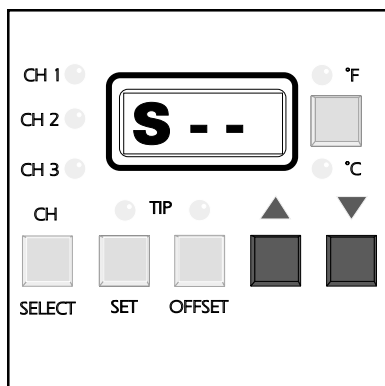

AUTOMATIC SHUTDOWN

10. The system enables the Automatic Shutdown feature only when the Automatic Setback feature is enabled. No additional steps are necessary.

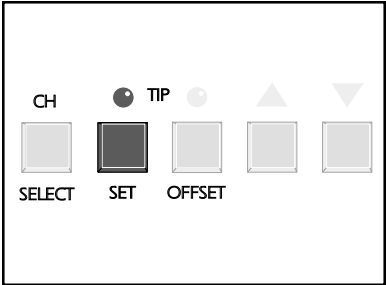


CHANNEL SELECTION

11. The Channel 1 LED is now lit signifying that Channel 1 is ready for calibration. Perform steps 12 through 21 to calibrate. As channels change, repeat these steps for each channel.

NOTE


All temperature limits are stored in system memory in degrees F.

LOWER TEMPERATURE LIMIT SETPOINT

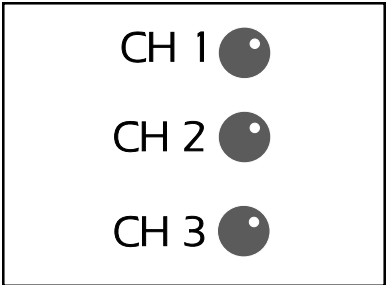


12. Press and release the Tip Temperature Set Key. The Digital Readout will

now display “L-X” (X = 1-9). This is the stored value of the Lower Temperature Limit in increments of 100°F. For example, if the “L-5” is displayed, the lower limit is 500°F.

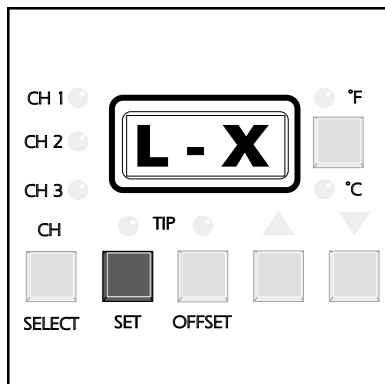


13. Press Scroll Keys as necessary to increase (Scroll Up Key) or decrease (Scroll Down Key) the Lower Temperature Limit value.

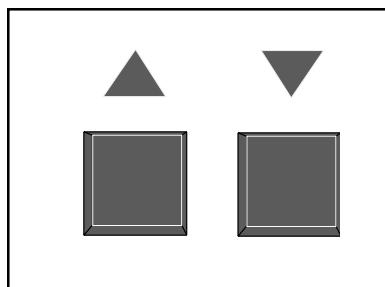

14. Press and release the Tip Temperature Set Key to store the display value into memory.

UPPER TEMPERATURE LIMIT SETPOINT

15. The Digital Readout now displays “H-X” (X = 1-9). This is the stored value of the Upper Temperature Limit in increments of 100°F in the same manner as the Lower

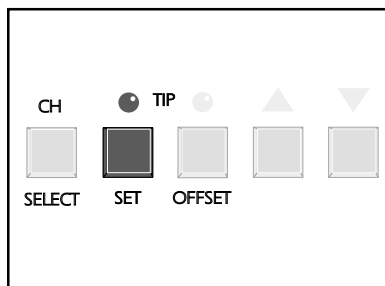


Temperature Limit readout (see step 12).

16. Press Scroll Keys as necessary to increase (Scroll Up Key) or decrease (Scroll Down Key) the Upper Temperature Limit value.




17. Press and release the Tip Temperature Set Key to store the displayed value into memory. The Digital Readout will now display "C-1".

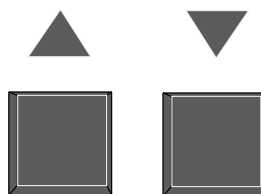

NOTE


If you do not wish to recalibrate for readout accuracy, press the TIP TEMPERATURE OFFSET Key and perform steps 12 through 17. After all channels have been calibrated, you may exit the Calibration Mode by pressing and releasing the Tip Temperature Offset Key again.

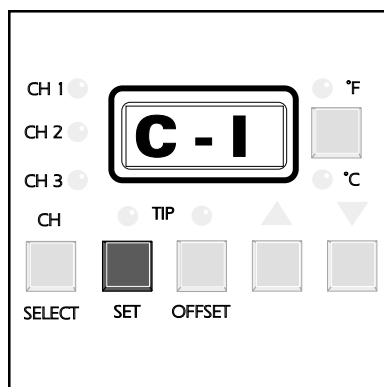


READOUT ACCURACY

18. Unplug the handpiece connected to the Current Channel and plug in the #1 Calibration Assembly.

19. Press and release the Tip Temperature Set Key. The Digital Readout will flash “- - -” to indicate that the system microprocessor controlled circuitry is recalibrating one aspect of the system circuitry. “C-2” will now be displayed.

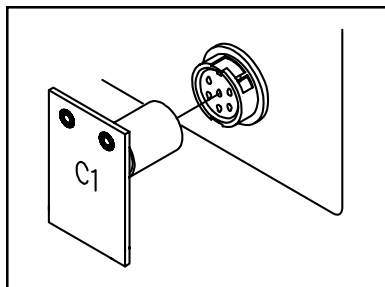


20. Unplug the #1 Calibration Assembly and plug in the #2 Calibration Assembly.

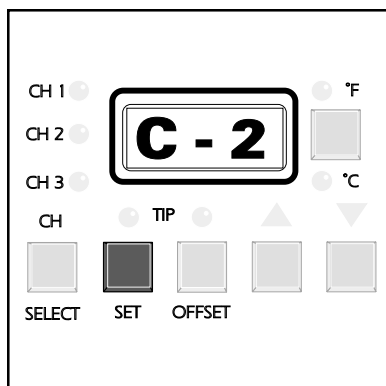


READOUT ACCURACY CONT'D

21. Press and release the Tip Temperature Set Key. The Digital Readout will flash “- - -” to indicate that the system

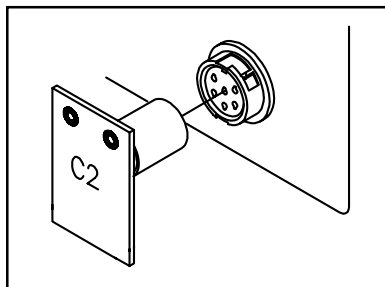


microprocessor controlled circuitry is recalibrating another aspect of the system circuitry. “CAL” will now be displayed indicating that calibration of this channel is complete.

22. Press and release the Tip Temperature Offset Key two times to exit calibration. All values, features and defaults entered during the calibration are now stored in memory and all channel tip temperature settings are turned “OFF”. All channel Tip Temperature Offset settings are set to the default value of 6°F (3°C).

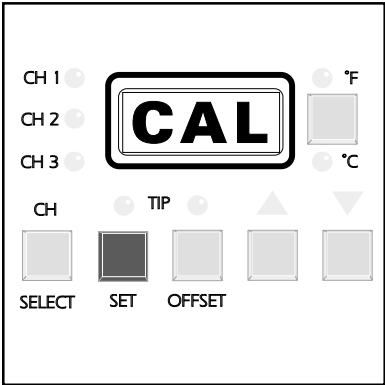

TEMPERATURE DISPLAY MESSAGE CODES

Listed below are Message Codes and a description of each which may be displayed on the system power source digital readout during the Calibration procedure.

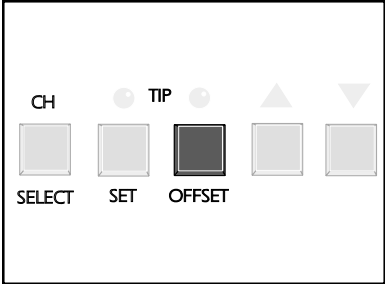

DISPLAY MESSAGE	DESCRIPTION
C-1 OR C-2	Indicates system is ready to process Digital Readout accuracy calibration for a particular channel using the appropriate calibration module.
CAL	Indicates that system is in the Calibration Mode.
E-5	Input to control circuitry unstable. Indicates that no calibration module is connected to the channel being calibrated or the incorrect module has been inserted.
E-6	Loose connection. Calibration input is out of range. Normally occurs if incorrect calibration module is inserted.
H-X (X = 1 thru 9)	Indicates the Current Channel is ready to accept new Upper Temperature Limit setpoint X (X times 100°F).
L-X (X = 1 thru 9)	Indicates the Current Channel is ready to accept new Lower Temperature Limit setpoint X (X times 100°F).
OFF	Setpoint for this channel is below Lower Temperature Limit setpoint.
S--	Indicates that the Automatic Temperature Setback (and Power Down) feature is disabled (turned off).
S-X	Indicates that the Automatic Temperature Setback (and Power Down) feature is enabled (turned on) and will set each channels' Set Tip Temperature back after X times 10 minutes of handpiece inactivity (non-use).
--- (flashing)	Indicates that the system circuitry is proceeding with calibration using the proper calibration module (C-1 or C-2).

